

Configuring a H-Tek UC8XX IP Phones with Calncall SIP


Step 1: First you will need to factory reset the phone.

Press **Menu** → **Setting** → **Advanced Setting** (default password: **admin**) → **Factory Reset**. Press **OK** soft key in the warning page.

Step 2: To find your phone's IP address, simply press the  key and select **Network** on the phone.



Step 3: Point your browser to the web interface of your H-Tek IP phone, which in this example is **http://192.168.7.102**

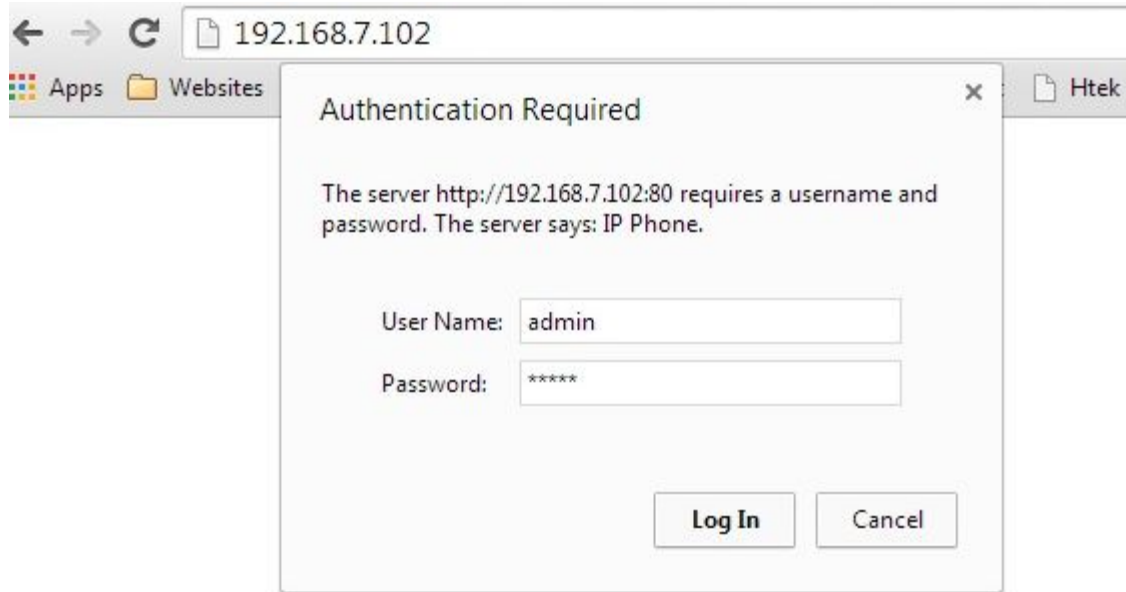

Enter your phone's login credentials – username and password is **admin** by default.

Step 4: Click on the **Account** tab and enter the following information.

Account: Account1

Account Active: Yes

Label & Name: Enter the name you want to appear on the phone's display

SIP User ID : <sip username>

Authenticate ID : <sip username>

Authenticate Password : <sip password>

Primary SIP Server: siptrunk.calncall.com

Home | **Account** | Network | Function Keys | Setting | Dir

Account Account 1

Account Status Registered

* Account Active No Yes

* Primary SIP Server siptrunk.calncall.com ?

Failover SIP Server ?

Second Failover SipServer ?

Prefer Primary SIP Server No Yes ?

Outbound Proxy ?

* SIP Transport UDP TCP TLS ?

NAT Traversal No No, but send keep alive STUN

Lable Conf ?

* SIP User ID XXXXXXXX ?

* Authenticate ID XXXXXXXX ?

* Authenticate Password ?

Name Conf ?

Step 5: Once you've entered all the details in the accounts page click on **Save Set** and **Restart**.



Dial Pattern :

- ❖ For Singapore 65 + <Number>. Ex: 6563401006
- ❖ For International Prefix: 00 + <Country Code> + <Number>.
Ex: 008034790665(Japan)

You can buy from our website if you don't have an SIP account
www.calncall.com